

Country Club International Stainless Steel Golf Hire Buggy



Assembly Instructions

Box Contents

1x lower shaft with skid plate



1x upper shaft with handle



1x axle bracket



1x removable bag bracket



2x wheels



Box Contents cont.

2x wheel axles (Each containing: 1x Bolt, 1x spring washer, 1x flat washer, 1 x nut, 1x locking nut)



1x shaft bolt with locking nut, spring washer and flat washer



4x axle bracket bolts (Each containing: 1x Bolt, 1x spring washer, 1x flat washer, 1x locking nut)



1x square, plastic end-cap



4x round, rubber end-caps



1x rectangular rubber gasket with bolt holes



*****Not included: Grease for the axles to avoid the nuts binding if tightened too quickly*****

Assembly Method

1. Remove all parts from box and remove protective packaging
2. Slide the upper shaft with handle on to the lower shaft with skid plate and secure with the 1x shaft bolt with locking nut, spring washer and flat washer




3. Tap in the square, plastic end-cap into the top of the upper shaft with handle




4. Tap 2x round, rubber end-caps onto the bag bracket on the lower shaft with skid plate



5. Line up the holes on the square plate of the lower shaft with skid plate, with the rubber gasket and with the square plate on the axle bracket and secure with 4x bolt, 4x nut, 8x spring washers and 8x flat washers

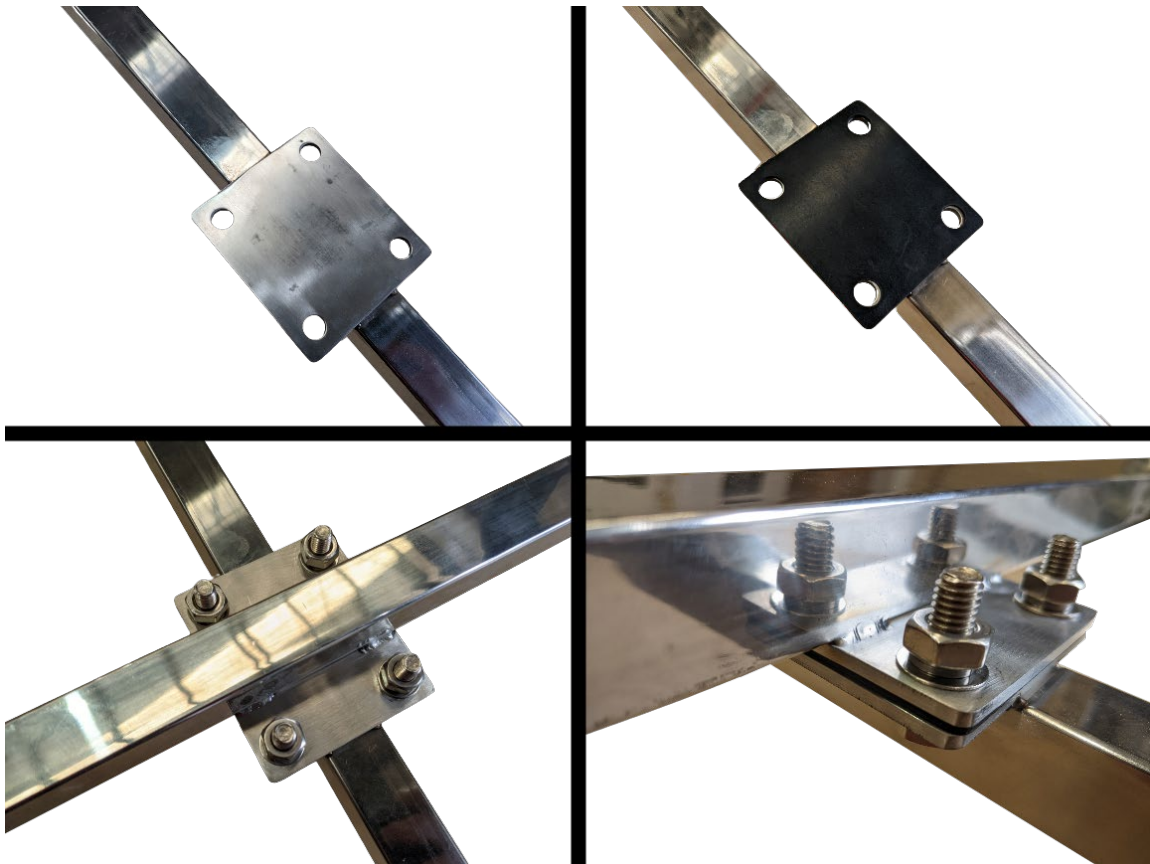

6. Insert the 2x axles with the head of the bolt, 1x spring washer and 1x flat washer on the inner side of the axle frame and grease the thread to avoid the nuts binding on the thread from tightening too quickly

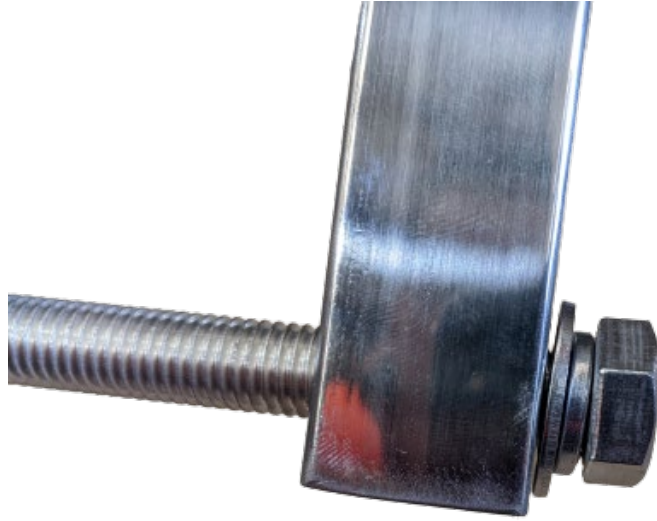

7. Tighten 1x nut on each of the 2x axles, on the outer side of the axle frame



8. Slide the 2x wheels on to the 2x axles



9. Tighten 1x locking nut on each of the 2x wheel axles on the outer side of the 2x wheels. Ensure not to overtighten to avoid locking up the wheel.



10. Tap 2x round, rubber end-caps onto removable bag bracket and place removable bag bracket on the mount located on the lower shaft with skid plate



If there are any parts missing or damaged please notify Country Club International at info@countryclub.com.au immediately upon receipt of the goods.

Should you have any questions regarding assembly of the buggy please contact Country Club International at info@countryclub.com.au